


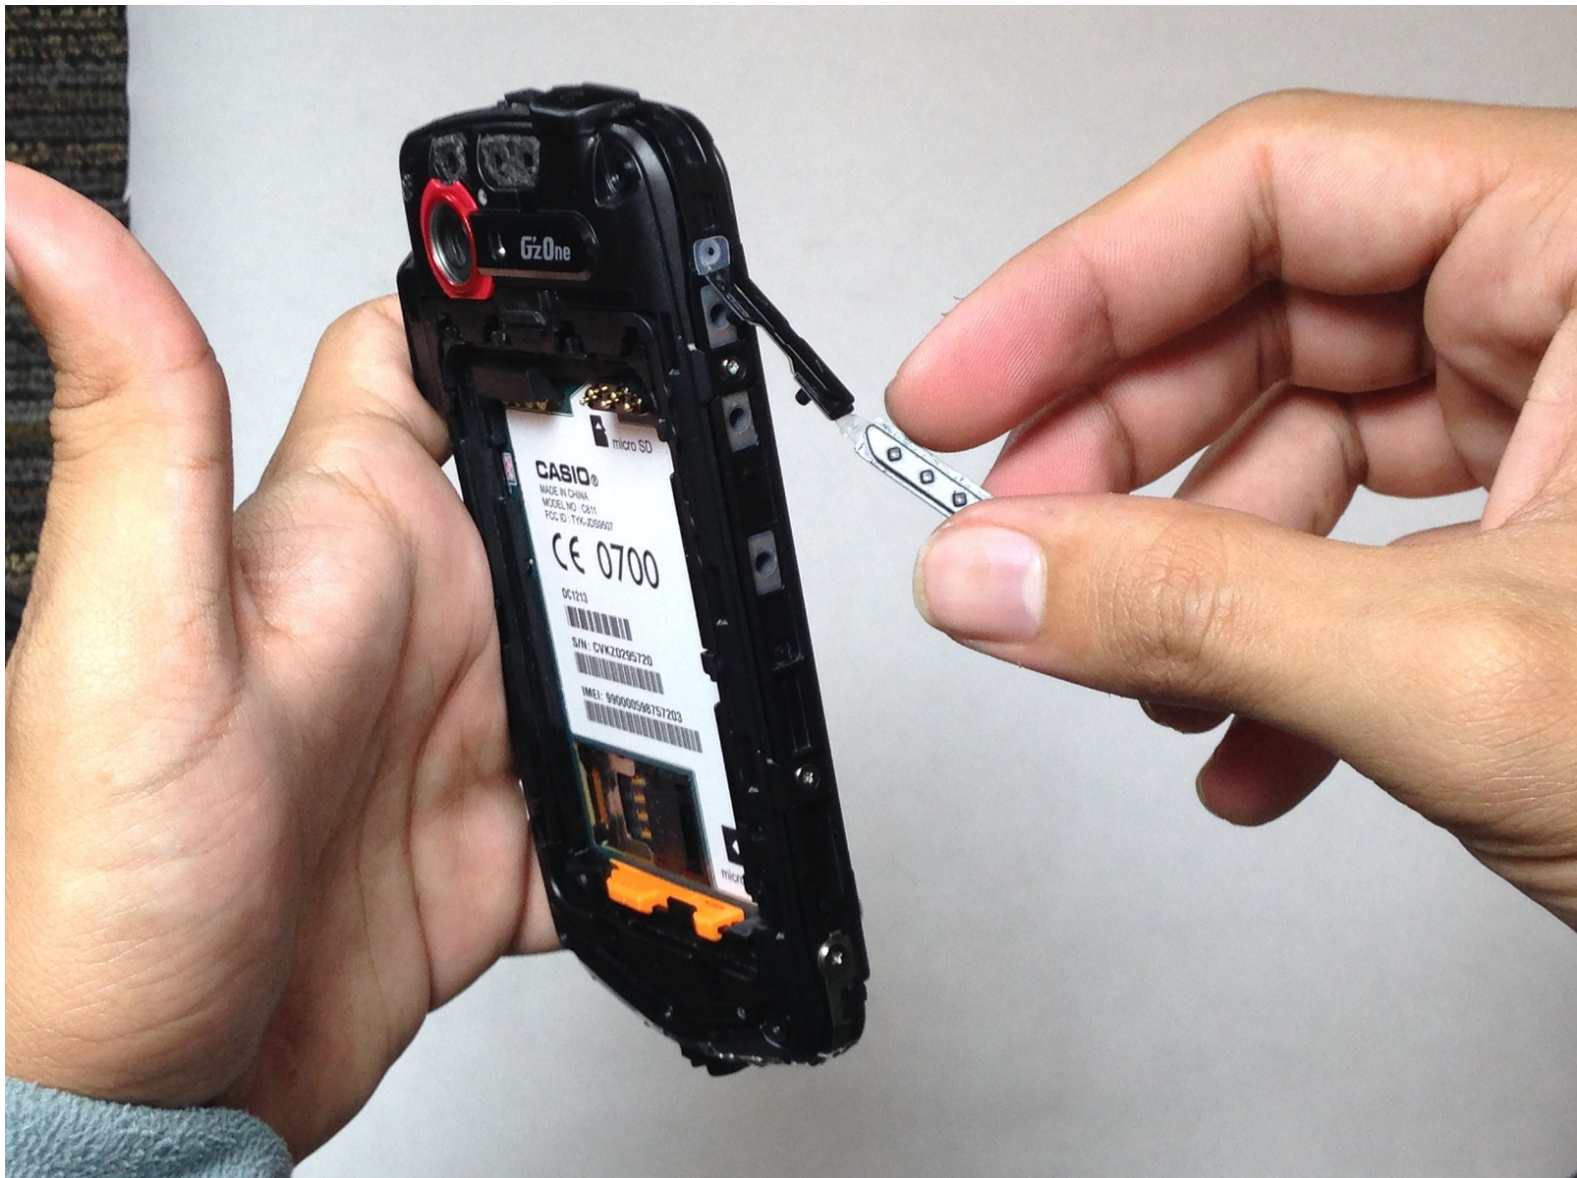

# Casio G'zOne Commando 4G LTE Volume Buttons Replacement

This guide shows how to replace the volume buttons located on the side of the phone.

Written By: Brett Boehm





## TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Remove front and back screws



- Use a screwdriver to remove the front and back 5 mm screws. (4 screws in the back and 2 screws in the front)

## Step 2 — Remove side-Back cover

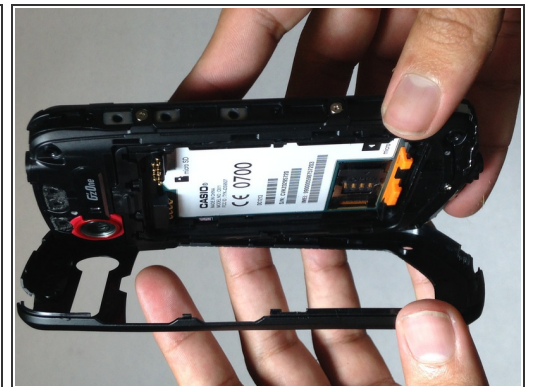


- Use your hands to remove the side cover from any corner of the phone.
- Push the screen with your thumbs so that the frame comes out easily.

⚠ Make sure to push gently because the frame is fragile.




### Step 3 — Remove Side-Front cover

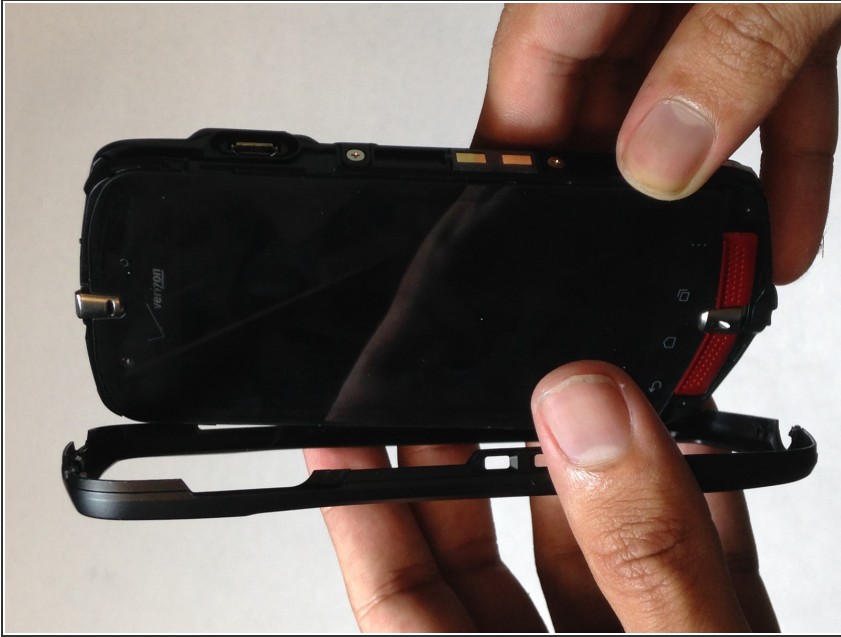


- The side-front cover will come out easily because it is not attached any more by the side-back cover.

### Step 4

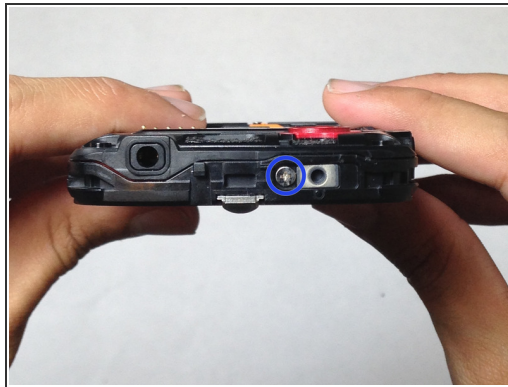

- unscrew the eight 2.5mm Phillips screws in the holes of the casing.

## Step 5

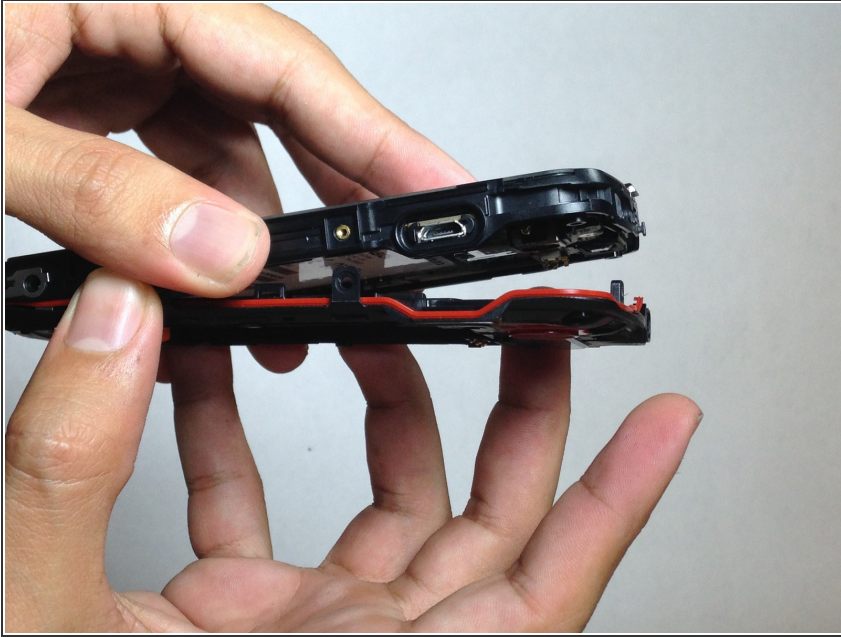

- After all the side screws are removed, pull off the motherboard cover.


## Step 6



- Unscrew all 2.5 mm attached to the mother board.
- ⚠ don't touch the integrated circuits in the mother board



## Step 7 — Motherboard

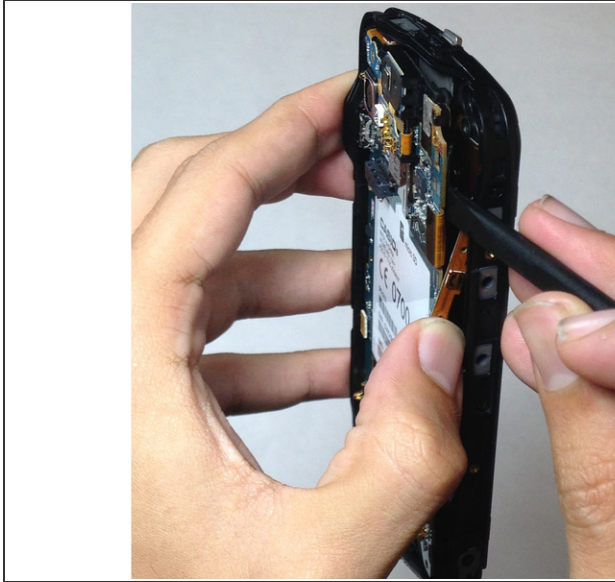

- Use the spudger to finally remove the motherboard very gently.

## Step 8 — Removing external volume pads



- Following step 4 in the prerequisite guide, remove the volume pads located on the side of the phone with a gentle pull.

## Step 9 — Removing internal volume buttons



- Following step 6, remove the adapter connecting the volume buttons to the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-14 09:14:09 PM.